


---

## SPS-2000 Network Settings

The default SPS-2000 IP address is derived from its register number. This facilitates network set up and helps avoid user mistakes.

However, custom networks settings can be made so that an SPS-2000 system can send report data to an FTP site.

The diagram below illustrates a typical internet connection:

 

To assign network settings:

1. Select System Options from the **S-Mode** menu. Touch the **PAGE #4** tab.

The screenshot shows a software interface titled "S-MODE SYSTEM OPTIONS" with a purple header. Below the header are four tabs: "PAGE #1", "PAGE #2", "PAGE #3", and "PAGE #4", with "PAGE #4" being the active tab. The main area is light blue and contains the following settings:

- # NETWORK SETTING?** with a "YES" button.
- AUTOMATICALLY GET IP ADDRESS? (DHCP)** with a "NO" button.
- IP ADDRESS** with a text field containing "192.168.0.1".
- SUBNET MASK** with a text field containing "255.255.255.0".
- GATEWAY** with a text field containing "0.0.0.0".
- DNS SERVERS#1** with a text field containing "0.0.0.0".
- DNS SERVERS#2** with a text field containing "0.0.0.0".


At the bottom of the screen are two buttons: "OK" and "CANCEL".

2. Make the following settings:

<b># NETWORK SETTING?</b>	Set to <b>YES</b> .
<b>AUTOMATICALLY GET IP ADDRESS (DHCP)</b>	Set to YES only if you want to get the IP address from the DHCP server. Consult your network administrator.
<b>IP ADDRESS</b>	<b>192.168.0.1</b> (See note below)
<b>SUBNET MASK</b>	<b>255.255.255.0</b>
<b>GATEWAY</b>	If connected by router, set to IP Address of Router
<b>DNS SERVERS#1</b>	If connected to Internet, obtain from your Internet Service Provider (ISP)
<b>DNS SERVERS#2</b>	

**Note : SPS-2000s in a IRC system should be in same network. That is, SUBNET MASK and upper part of IP address should be identical.**

**For example: xxx.xxx.xxx.xxx**

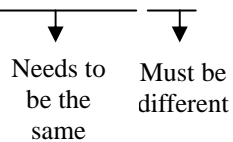

3. Touch **OK** to close and save your settings.

---

# GuildFTPd Setup Instructions

---

**Note:** GuildFTP can be used to demonstrate FTP by connecting PC directly connected an SPS-2000.

---


## Set PC IP Address

At your PC, you must set the network IP Address to:

<b>IP Address</b>	192 . 168 . 0 . 99
<b>Subnet Mask</b>	255 . 255 . 255 . 0

Using the following procedure if you are using Windows XP (other Windows operating systems use similar procedures):

1. Click **Start, Settings, Network Connections**. The *Network Connections* dialog displays:
2. Select the Local Area Connection listing and right-click. Select **Properties** from the sub-menu to display the *Local Area Connection Properties* dialog box.
3. Select the Internet Protocol TCP/IP listing and click the Properties command button.

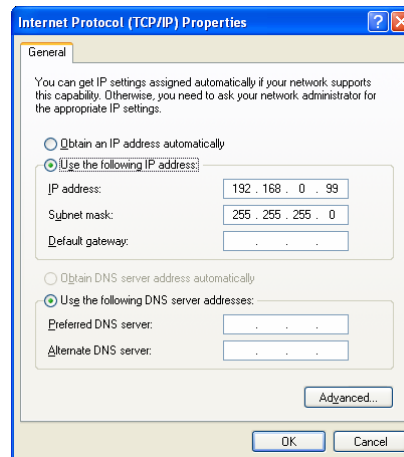

### CAUTION:

If you are changing your normal network settings to connect to the SPS-2000, be sure to restore your settings after SPS-2000 Communications are complete.



4. Click the “Use the following IP address” option button and enter the settings displayed in the example above.
5. Click **OK**, and then click **OK** to close the Local Area Connection Properties dialog box.

## Create Directories for SPS-2000 Files

1. At your PC, create the directory: C:/2000/sps2000-ftp
2. Back up your SPS-2000 program to SD. Copy the program to C:/2000/sps2000-ftp.
3. Copy the report viewing utilities (EmpRpt.exe, FinRpt.exe, GrpRpt.exe, PluRpt.exe) to C:/2000/sps2000-ftp.



## GuildFTPd Installation & Setup

1. After installation, open the GuildFTPd program from the desktop.
2. Make sure to **unblock** the GuildFTPd FTP Server Daemon, if you get the notice.
3. By right clicking on **System**, you will be able to **delete** any users or groups that are already set up.
4. Set up the Group: ADMIN; and a User: sps2000.
5. Right-click on **System**, and select **Add Group**.

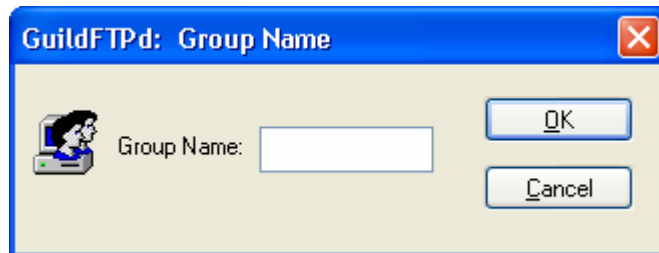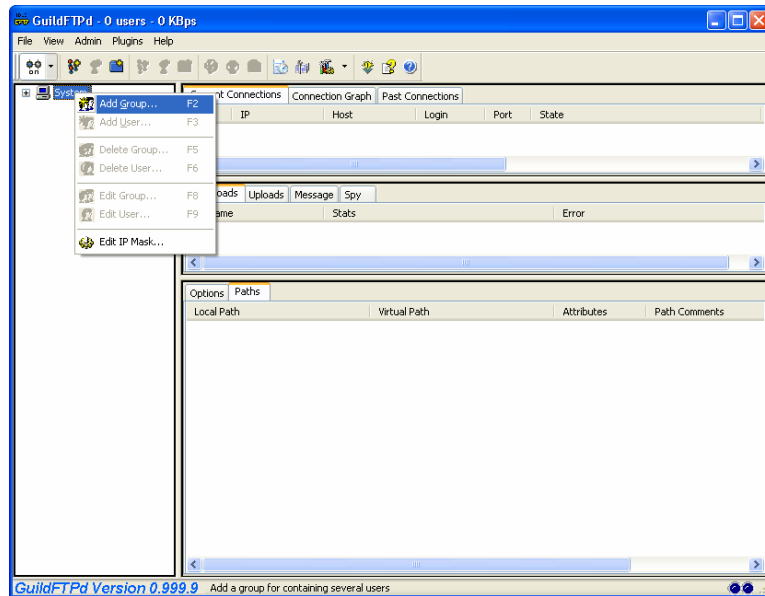


6. The Group name should be ADMIN.

7. Right-click on your Group ADMIN and select **Add User**.

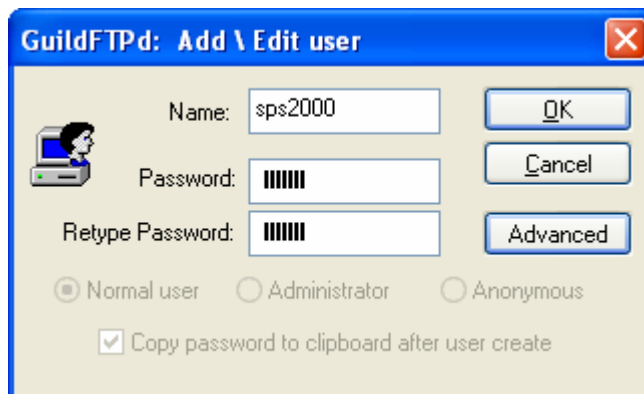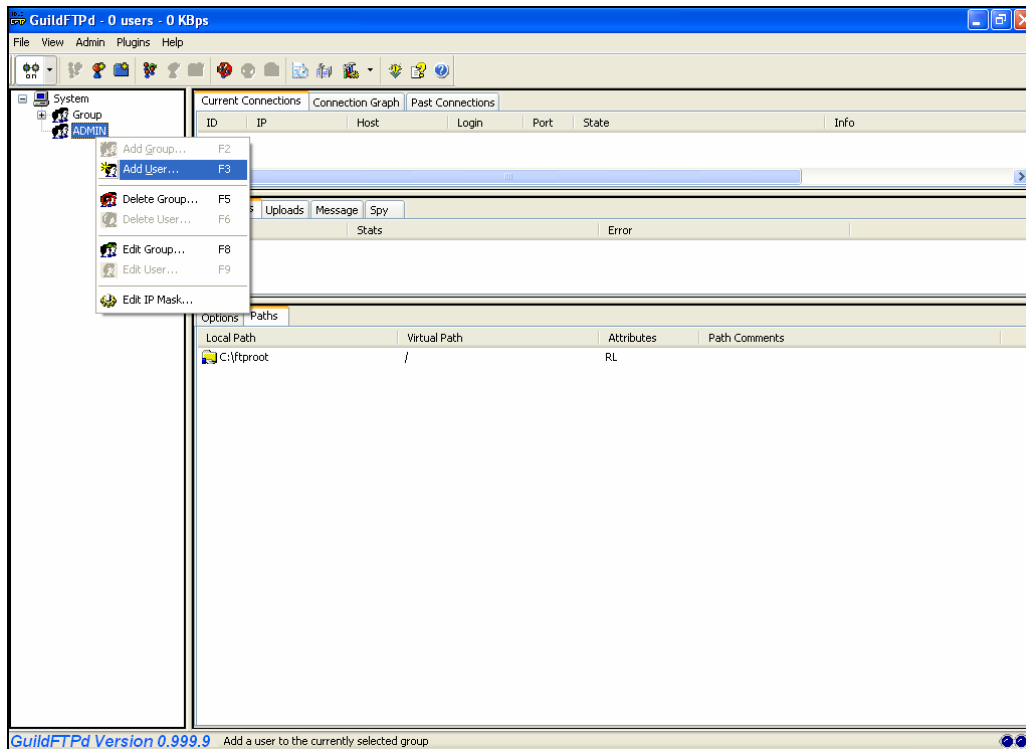


8. User name should be “sps2000” with password of “sps2000” and the Administrator radio-button selected.
9. This username and password correspond to how you program the Network Connections in the SPS-2000.

10. Click the plus sign by System to view the Group and User you've just created.

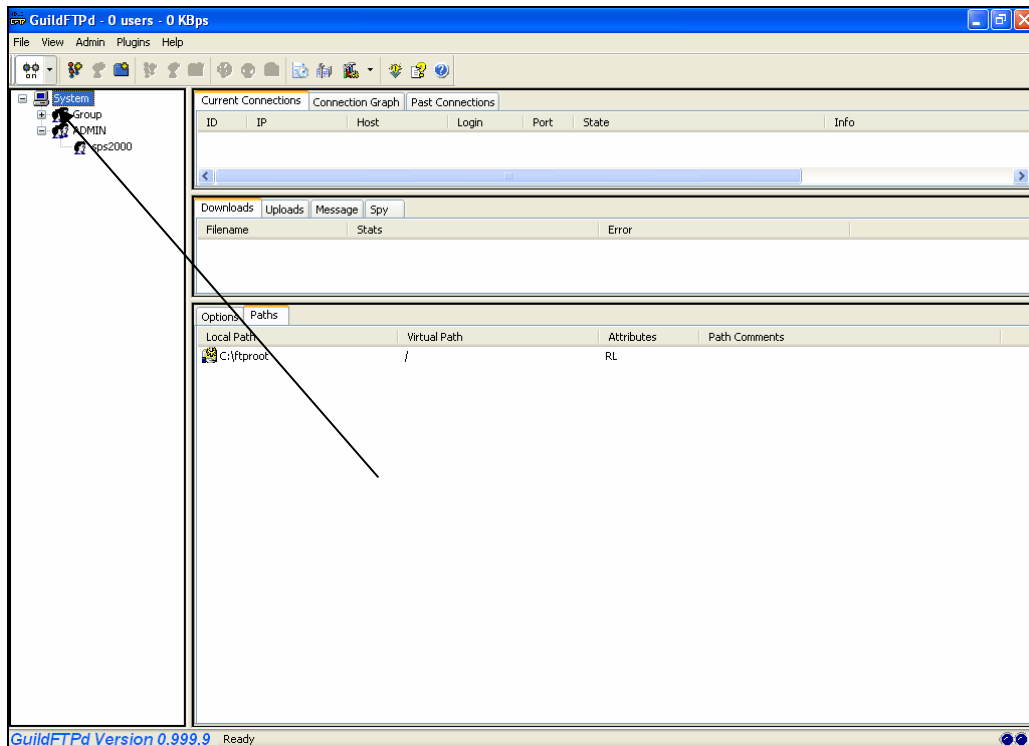

11. Edit the settings for the Group ADMIN and the User sps2000 within the System.
12. Click on **System** and in the bottom panel click on the **Options** tab.

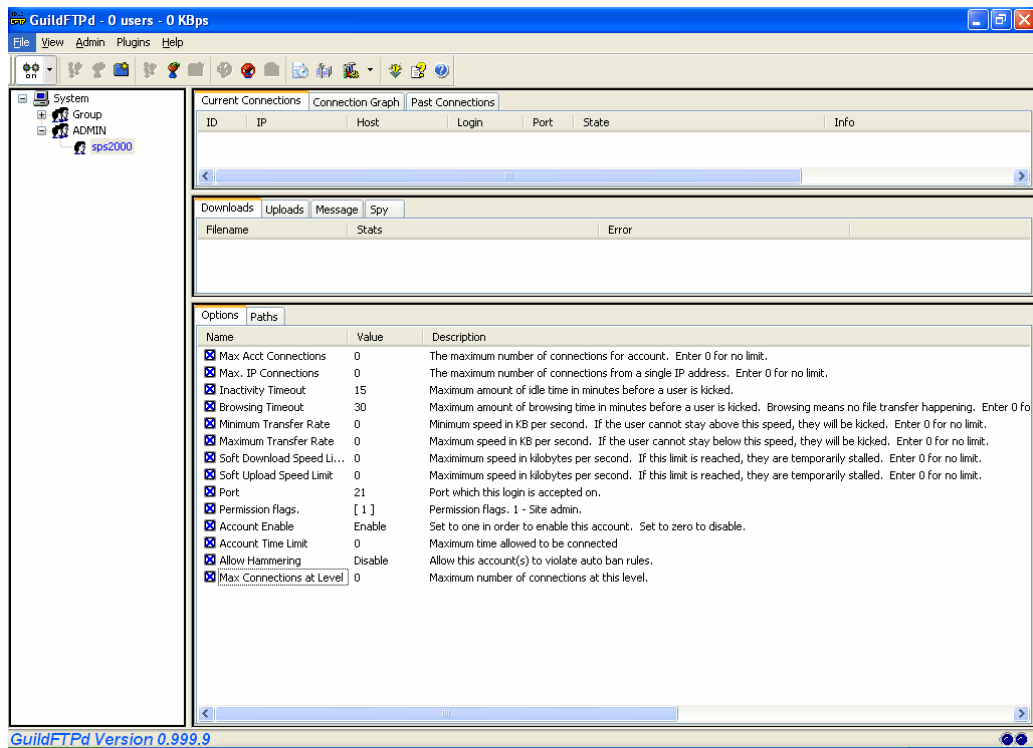

13. Make sure that at least these options are set:


**Inactivity Timeout** = 15,  
**Browsing Timeout** = 30,  
**Port** = 21  
**Permissions flag** should be [1]  
**Account Enable**= ENABLE  
**Allow Hammering** = DISABLE,.

14. All options check boxes should be **checked** for the ADMIN Group.


15. In User ADMIN, the options should be set the same as above:

**Inactivity Timeout** = 15,  
**Browsing Timeout** = 30,  
**Port** = 21  
**Permissions flag** should be [1]  
**Account Enable**= ENABLE  
**Allow Hammering** = DISABLE,.

16. Delete existing paths, and create the path for communication.
17. Click on the ADMIN group (1), then select the Path tab (2), and right-click the existing path to select EDIT PATH (3).

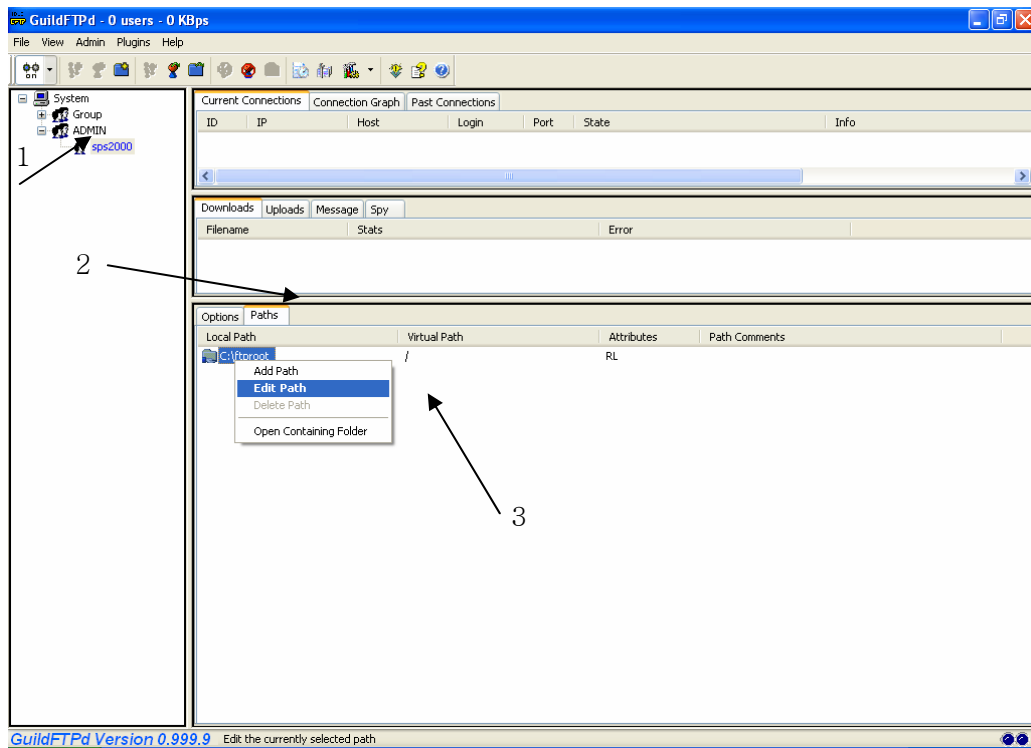



18. Path: C:\2000\sps2000-ftp
19. Virtual path: only /.

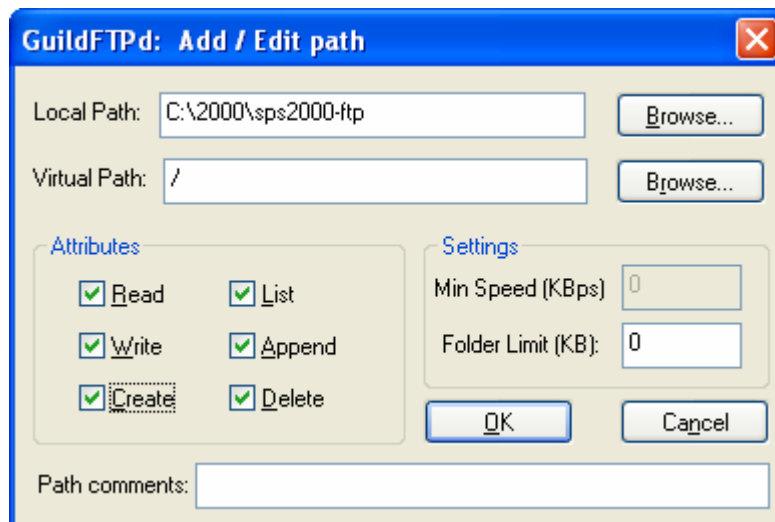

20. The folders also need to have all 6 of the attributes (RWADCL) selected.




21. Select the Admin menu at the top of the screen and go to Edit IP Mask.

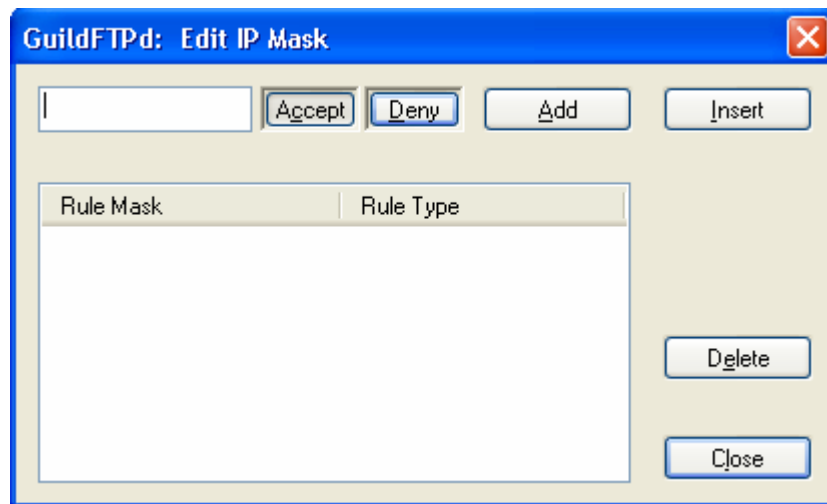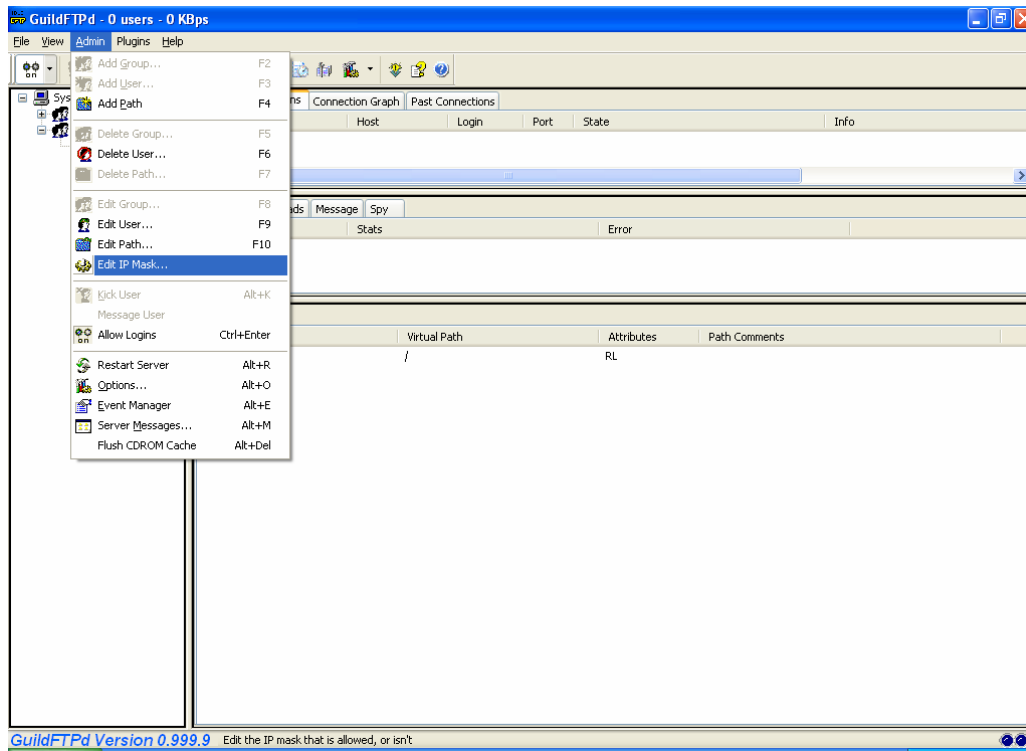


22. Delete any entries here.

23. Select the View menu at the top of the screen and select View Ban List.

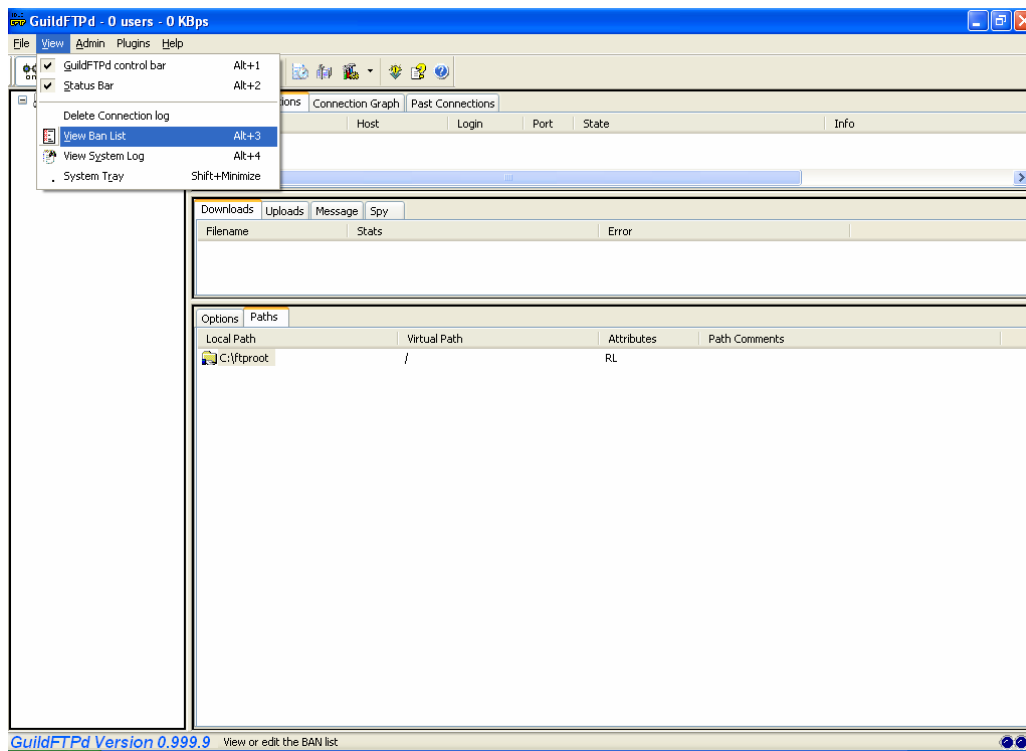

24. Unban any entries here.

25. Click on the Admin menu at the top of the screen and select Restart Server.

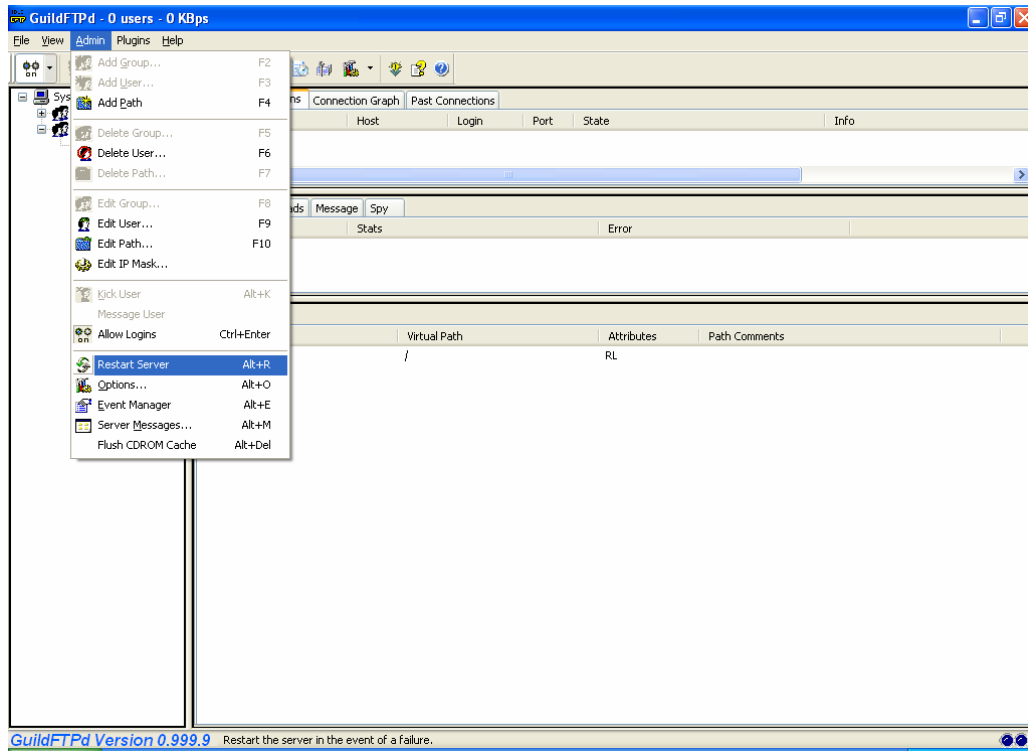

26. You should now be able to connect using the GuildFTPd.

---

**Finished! The PC is now able to communicate with the SPS-2000.**

---

---

## FTP Transmission of Report Files

1. Select **SRAM BACKUP** from the **S-Mode** menu.

The screenshot shows the S-Mode menu interface. At the top, there are tabs for REG, REP, PGM, and S, followed by a yellow bar labeled 'EMPLOYEE SIGN ON'. The main menu area contains several options: SELF TEST, KEY RELOCATION, DEFINE PORT, LOAD DEFAULT MESSAGE, SRAM BACKUP, MEMORY ALLOCATION, PRINTER DRIVER SELECTIONS, PASSWORD, and CLERK UNLOCK. A sub-menu for 'SRAM BACKUP' is open, displaying the following options: LOAD MEMORY ALLOCATION FROM SD, BACKUP PGM TO SD, RESTORE PGM FROM SD, SAVE REPORT TO SD, RESTORE REPORT FROM SD, FTP TRANSMISSION, and NONE.

2. Touch **FTP TRANSMISSION**.

The screenshot shows the 'FTP TRANSMISSION' configuration screen. It has a purple header bar with the title 'FTP TRANSMISSION'. Below the header, there are four input fields: 'FTP SERVER ADDRESS' with the value '192.168.0.99', 'FTP PORT NUMBER' with the value '21', 'FTP ID' with the value 'sps2000', and 'FTP PASSWORD' with the value '\*\*\*\*\*'. At the bottom of the screen, there are two buttons: 'CONNECT..' and 'CLOSE'.

4. Enter the information for the FTP site you are connecting to:

<b>FTP SERVER ADDRESS</b>	<b>192.168.0.99</b>
<b>FTP PORT NUMBER</b>	<b>21</b>
<b>FTP ID</b>	<b>sps2000</b>
<b>FTP PASSWORD</b>	<b>Sps2000</b>

3. Touch **CONNECT**. If the connection is successful, the following screen displays:

# SELECT REPORT FILES					
# PAGE 1	# PAGE 2	# PAGE 3			
# SELECT REPORT FILES					
FINANCIAL	<input checked="" type="checkbox"/> Z1	<input type="checkbox"/> Z2	<input type="checkbox"/> Z3	<input type="checkbox"/> Z4	<input type="checkbox"/> Z5
EMPLOYEE	<input checked="" type="checkbox"/> Z1	<input type="checkbox"/> Z2	<input type="checkbox"/> Z3	<input type="checkbox"/> Z4	<input type="checkbox"/> Z5
PLU	<input checked="" type="checkbox"/> Z1	<input type="checkbox"/> Z2	<input type="checkbox"/> Z3	<input type="checkbox"/> Z4	<input type="checkbox"/> Z5
GROUP	<input checked="" type="checkbox"/> Z1	<input type="checkbox"/> Z2	<input type="checkbox"/> Z3	<input type="checkbox"/> Z4	<input type="checkbox"/> Z5
GROUP BY TIME PERIOD	<input type="checkbox"/> Z1	<input type="checkbox"/> Z2	<input type="checkbox"/> Z3	<input type="checkbox"/> Z4	<input type="checkbox"/> Z5
TIME PERIOD	<input type="checkbox"/> Z1	<input type="checkbox"/> Z2	<input type="checkbox"/> Z3	<input type="checkbox"/> Z4	<input type="checkbox"/> Z5
TIME KEEPING	<input type="checkbox"/> Z1	<input type="checkbox"/> Z2	<input type="checkbox"/> Z3	<input type="checkbox"/> Z4	<input type="checkbox"/> Z5
MIX & MATCH	<input type="checkbox"/> Z1	<input type="checkbox"/> Z2	<input type="checkbox"/> Z3	<input type="checkbox"/> Z4	<input type="checkbox"/> Z5
SELECT ALL    SELECT OFF    UPLOAD FILES					
CLOSE					

4. Select file(s) you want to transmit and touch **UPLOAD FILES**.

---


## Viewing .FRT/.RPT Report Formats

SAM4s SPS-2000 reports are transmitted via FTP in .FRT format; Reports archived by SD card are saved in .RPT format. These files are not ASCII and cannot be directly read by a report editor. However, SAM4s supplies separate utilities to view, print or export .FRT and .RPT files. They are:

Report type	Utility
Financial	FinRpt.exe
Group	GrpRpt.exe
Employee	EmpRpt.exe
PLU	PluRpt.exe

### Financial Report Viewer

1. Execute FinRpt.EXE.

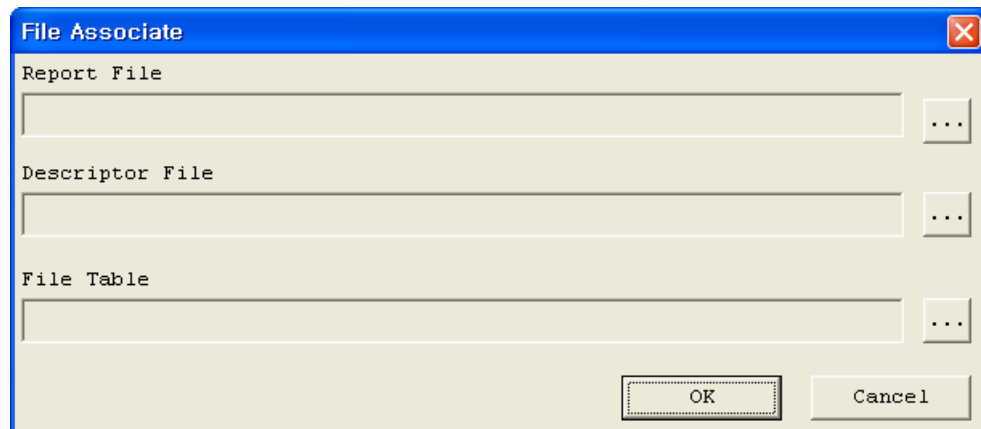

2. Specify each file by clicking the browse button:


**Report File:** Fin\_1.frt or Fin1.rpt (where the numeral indicates the report level, Z1, Z2, Z3, etc.)

**Descriptor File:** The financial report descriptor file:

FINRPT\_MSG.pgm

**File Table:** The register information file. Its name is FILETAB.dat

3. Click **OK**. The financial report displays:

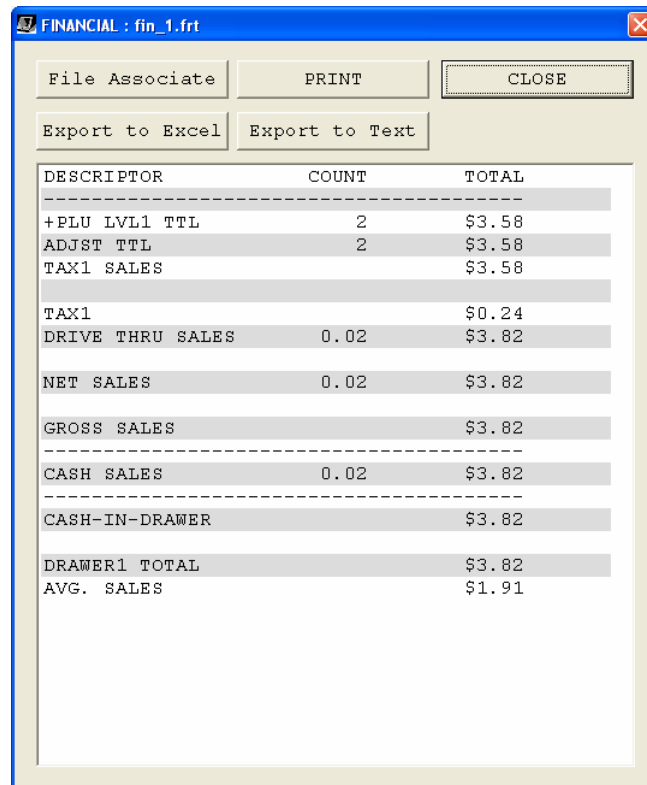

The screenshot shows a window titled "FINANCIAL : fin\_1.frt" with a blue title bar. Below the title bar are five buttons: "File Associate", "PRINT", "CLOSE", "Export to Excel", and "Export to Text". The main area of the window contains a table with three columns: "DESCRIPTOR", "COUNT", and "TOTAL". The table data is as follows:

DESCRIPTOR	COUNT	TOTAL
+PLU LVL1 TTL	2	\$3.58
ADJST TTL	2	\$3.58
TAX1 SALES		\$3.58
TAX1		\$0.24
DRIVE THRU SALES	0.02	\$3.82
NET SALES	0.02	\$3.82
GROSS SALES		\$3.82
CASH SALES	0.02	\$3.82
CASH-IN-DRAWER		\$3.82
DRAWER1 TOTAL		\$3.82
AVG. SALES		\$1.91

4. Choose:

**Print:** to print the file

**Export to Excel:** to save the report in text (.txt) format


**Export to Text:** to save the report in Excel (.xls) format

**File Associate:** to select a new financial report

**Close:** to exit

## Group Report Viewer

1. Execute GrpRpt.EXE.

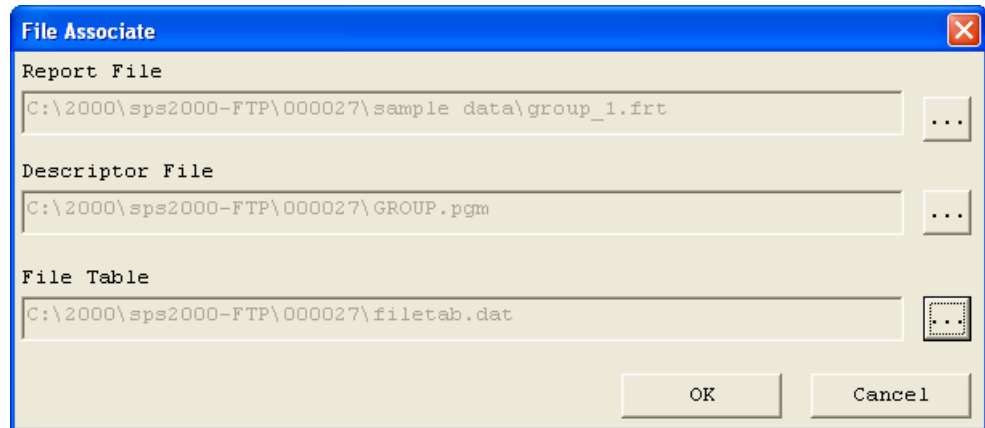

2. Specify each file by clicking the browse button:

**Report File:** Group\_1.frt or Grp1.rpt (where the numeral indicates the report level, Z1, Z2, Z3, etc.)

**Descriptor File:** The group program file: GROUP.pgm

**File Table:** The register information file. Its name is FILETAB.dat

3. Click **OK**. The financial report displays:
4. Choose:

**Print:** to print the file

**Export to Excel:** to save the report in text (.txt) format

**Export to Text:** to save the report in Excel (.xls) format


**File Associate:** to select a new financial report

**Close:** to exit



## Employee Report Viewer

1. Execute EmpRpt.EXE.

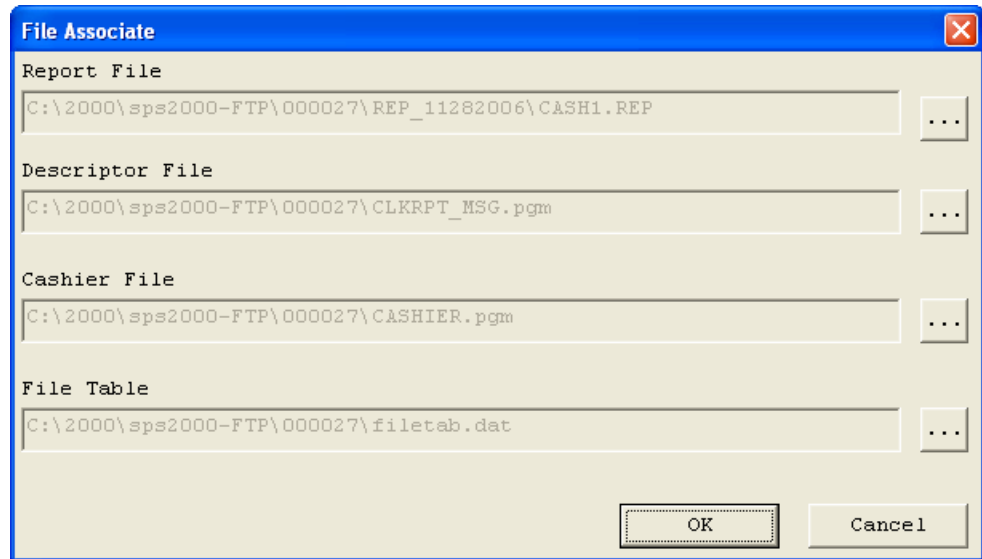

2. Specify each file by clicking the browse button:

**Report File:** CASH1.frt or CASH1.rpt (where the numeral indicates the report level, Z1, Z2, Z3, etc.)

**Descriptor File:** The clerk report report descriptor file: CLKRPT\_MSG.pgm

**Cashier File:** The Cashier file program: CASHIER.pgm

**File Table:** The register information file. Its name is FILETAB.dat

3. Click **OK**. The financial report displays:
4. Choose:

**Print:** to print the file

**Export to Excel:** to save the report in text (.txt) format


**Export to Text:** to save the report in Excel (.xls) format

**File Associate:** to select a new financial report

**Close:** to exit

## PLU Report Viewer

1. Execute EmpRpt.EXE.

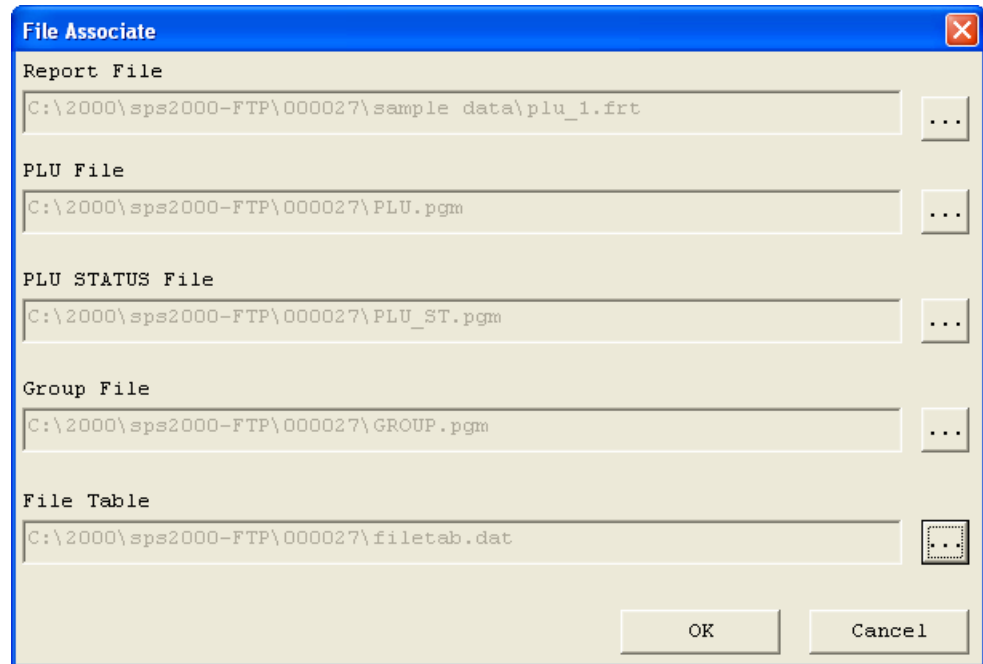

2. Specify each file by clicking the browse button:

**Report File:** Plu\_1.frt or Plu1.rpt (where the numeral indicates the report level, Z1, Z2, Z3, etc.)

**PLU File:** The PLU program file: PLU.pgm

**PLU STATUS File:** The PLU Status program file: PLU\_ST.pgm

**Group File:** The Group program: GROUP.pgm

**File Table:** The register information file. Its name is FILETAB.dat

3. Click **OK**. The financial report displays:
4. Choose:

**Print:** to print the file

**Export to Excel:** to save the report in text (.txt) format

**Export to Text:** to save the report in Excel (.xls) format

**File Associate:** to select a new financial report

**Close:** to exit